Polaroid

Digital Photo Frame
User's Manual

Questions?
Need some help?

This manual should help you understand your new product.

If you still have questions, call our help line found on the insert with this icon:

Or visit www.polaroid.com/support.

20080218

Controls and Basic Instructions

CONGRATULATIONS on your purchase of a Polaroid digital photo frame. Please read carefully and follow all instructions in the manual and those marked on the product before first use. Failing to follow these warnings could result in personal injury or damage to the device. Also, remember to keep this User's Manual in a convenient location for future reference.
Important: Save the original box and all packing material for future shipping needs.

Controls

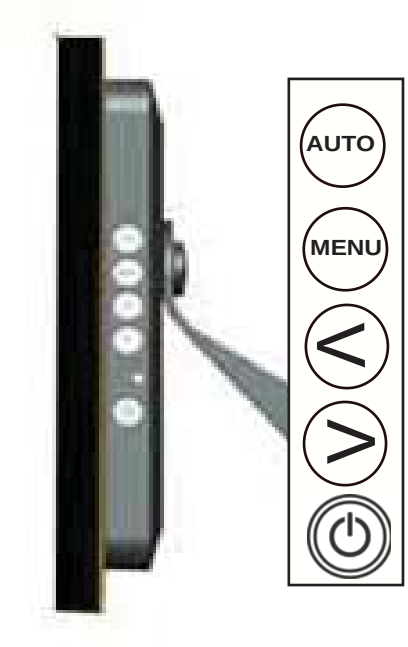

AUTO:
Press & Hold (under normal mode):
Automatically adjusts the position of the display area of the LCD screen.
Press (under "Display Screen Adjustment Menu"): Exit.

MENU:
Press (under normal mode): Enter into "Display Screen Adjustment Menu".
Press (under "Display Screen Adjustment Menu"): Select items in the menu.

UP ARROW
Press (under normal mode): Increase music volume
Press (under "Display Screen Adjustment Menu"): Move up or go to previous

DOWN ARROW
Press (under normal mode): Decreases music volume
Press (under "Display Screen Adjustment Menu"): Move down or go to next

POWER: Turns power on/off

Installing a Flash Media Card

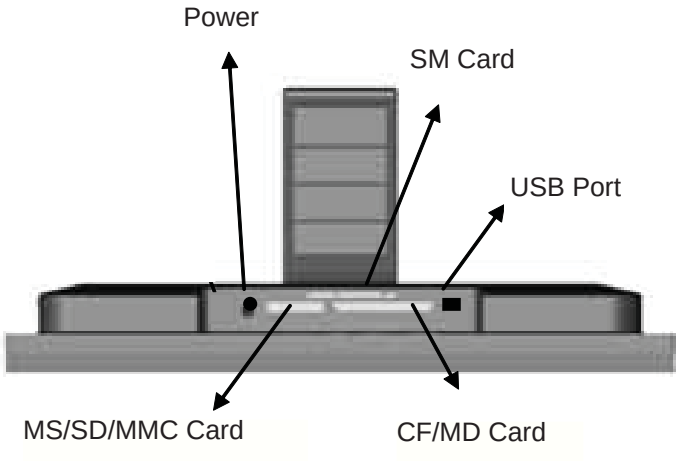

1. Find the slot that fits your flash media card.
2. Insert the card in the correct slot.
3. To remove the card, simply push it in slightly until it springs back out. Remove.

Note: Do not remove any memory card from its slot while pictures are playing. Doing so could damage the frame or memory card. Always turn the power off before removing the memory card.

THE MMP SAYS THIS FRAME READS CF, SD, MMC, SM, MS, MS PRO, MS DUO, MS PRO DUO -- WE WILL NEED A NEW IMAGE TO SHOW WHERE THESE CARDS ARE READ

Controls and Basic Instructions

Replacing the Remote Control Battery

1. Remove the battery compartment by pulling the cover in the direction of the arrow.
2. Remove old battery and dispose of correctly.
3. Insert new battery taking note of correct polarity (+/-).
4. Replace cover.

Caution:
1.Only use a 3V CR2025 battery.
2.Dispose of used batteries according to local ordinance regulations.
3.Remove the battery when not using the Flash Player for prolonged periods.

Buttons on the Remote Control

POWER button Press to turn player on or off.
SETUP button Press to open menu for changing settings.
CARD SELECTION button Press to choose a different memory card.
MUSIC button Press to go to and display music files.
PHOTO button Press to go to and display photo files.
ROTATE button Press to rotate photos 90 degrees clockwise on screen
ZOOM button Press to zoom up to 4x (on photos only)
SLIDESHOW button Press to start/stop a photo slideshow
+ VOLUME button Press to increase volume
- VOLUME button Press to decrease volume
MUTE button Press to instantly mute volume
↑ button Press to move up when selecting files on your screen.
← button Press to move left when selecting files on your screen.
►‖ **PLAY/PAUSE** button Press to play/pause or confirm selections on your screen.
→ button Press to move right when selecting files on your screen.
↓ button Press to move down when selecting files on your screen.
STOP button Press to stop the selected file/action.

Controls and Basic Instructions

Setup Menu	Sub-Menus	Description
Separate window	On	Creates additional frames to view more than one picture at a time
	Off	
Slide show transition	Off	Choose a transition between images that gives you the creativity you want
	Fade	
	Shutter	
	Cross Combo	
	Mask	
	Brick	
	Dissolve	
	Bar	
	Expansion	
	Silk	
	Random	
Slide show speed	5 seconds	Choose from three different slide show speeds
	10 seconds	
	30 seconds	
Slide show shuffle	On	Lets you display photos in a random order
	Off	
Set favorite		Select the photo/music for your slide show
Music repeat	One	Allows you to repeat songs
	All	
	Off	
Reset settings	Yes	Resets all your settings back to the factory default
	No	
Full screen	On	View images at full screen
	Off	
English		Select the language of your choice: English, Italian, German, French, Spanish
Copy file	Target	Copy files to the target card
Delete file	Target	Delete files
Brightness/contrast	Degree bar	Adjusts these settings
Color/tint	Degree bar	Adjusts these settings
Alarm clock	Set current time	Use these settings to set your clock time and your alarm time
	Set alarm time	
Clock style	Photo mode	Calendar with photo
	Digital clock	Displays a digital clock
Auto slide setting	Off	Automatically turns on a slide show when the frame or remote is un-touched for this period of time
	30 seconds	
	60 seconds	
	5 minutes	
	15 minutes	

Specifications and Set Up and Navigation

Specifications

Unit	11” Digital Photo Frame
Unit Size	363mm x 270mm x 48mm
Display Area	235mm H x 140mm W
Resolution	800 x 400
Colors	262,144
Brightness	380cd/m2 max.
Contrast Angle	300:1
Weight	1.6 kg.
Card Type	CF, MS, SD, MMC, SM
Input	Mini USB
Auto Start Mode	Auto slide show (JPEG)
Photo Playback Mode	1. Rotate, zoom in
	2. Auto slide show
	3. Slide show with background music (MP3)
	4. Interval time setup
	5. Transition setup
Music Playback Mode	1. Play/stop/pause
	2. Volume adjust
	3. Repeat model setup
	4. File type, total time, date, display

Setting up the Digital Picture Frame

1. Plug the appropriate end of the AC adapter into a power outlet and the other end into the Digital Picture Frame.
2. After you’ve stored content on a flash media card (not included), insert the card into the proper slot (see page 2).
3. Turn the power switch to “ON”. As a default the first file of the card will be displayed first. Play sequences are automatically sorted alphabetically by file name, regardless of file type.

Connecting a USB Device to the Digital Picture Frame

1. The Digital Picture Frame has a built-in mini-USB port. If you would like to connect the USB device (such as a USB flash drive) to the Digital Picture Frame with a full-size port, please use the USB Connection Cable” included with the digital picture frame. This included cable has a male mini-size USB port and a female full-size USB port.
2. It is recommended that you turn off your USB device and the Digital Picture Frame before connecting the USB device.
3. This Digital Picture Frame cannot be connected to a computer.

NOTE: DO NOT TAKE THE MEMORY CARD OUT OF THE SLOT WHILE THE PICTURES ARE STILL PLAYING OR WHEN THE POWER IS STILL ON. THIS COULD DAMAGE THE FRAME OR THE MEMORY CARD. ALWAYS TURN THE POWER OFF BEFORE REMOVING THE MEMORY CARD.

Navigating in the Digital Photo Frame

Slide show Screen:

Turning the Digital Picture Frame on will initiate a photo slideshow with music, provided the inserted memory card has music and photo files.

Select Card Screen:

Press the Card selection button on the remote to return “Select card” menu

Select Function Screen:

Select a source disk, then press the Menu key, or press the play/pause button on the remote to enter “Select Function” menu as below:

Photo Browse Screen :

Select the Photo icon, then press the Menu key, or press the play/pause button on the remote to enter the Photo Browse Screen as below:

Navigating in the Digital Photo Frame

Music Browse Screen :

Select the Music icon, then press the Menu key, or press the play/pause button on the remote to enter the Music Browse Screen as below:

File Operation Screen :

Select the File icon, then press the Menu key, or press the play/pause button on the remote to enter the File Operation Screen as below:

Calendar Screen :

Select the Calendar icon, then press the Menu key, or press the play/pause button on the remote to enter the Calendar Screen as below:

Setting Language:

Press the Setup button on the remote pop-up the setting menu, select Language English , the menu language will be change English>Italian>German>French>Spanish

Navigating in the Digital Photo Frame

Setting Current Time:

In Calendar screen, press the Setup button on the remote control or hold the Menu key for 2 seconds, the setting menu will pop-up. Select Alarm Clock Setting and Set Current Time. Use “→” “←”key to select types. Use “↑” “↓”key to set specific numerical value. Finally press PLAY button to confirm

Setting Alarm Time:

In Calendar screen, press the Setup button on the remote control or hold the Menu key for 2 seconds, the setting menu will pop-up. Select Alarm Clock Setting and Set Current Time. Use “→” “←”key to select types. Use “↑” “↓”key to set specific numerical value. Finally press PLAY button to confirm

Set Favorite Photo and Song:

Using your remote control, select the photo view mode or music view mode, depending on whether you want to set a photo or song as your favorite. Select the photo or song you want to set as a favorite. Press set favorite on the remote control. You may select several photos or songs by hitting the repeat button on the remote control. To enter a slide show, either press the slide show key on the remote or hold down the auto key for 2 seconds.

Navigating in the Digital Photo Frame

Delete Files

a) In Select Card Screen Select Function Screen, press the Setup button on the remote control or hold the Menu key for 2 seconds, the setting menu will pop-up. Select Delete File will delete all the photo and music in the current card.

b) In File Operation Screen, press the Setup button on the remote control or hold the Menu key for 2 seconds, the setting menu will pop-up. Select Delete File, it will delete the photo or music you select.

Select file:

A. In File Operation Screen, press PLAY button/ Menu key once

B. In the setting menu, select Set Favorite

Copy Files

a) In Select Card Screen Select Function Screen, press the Setup button on the remote control or hold the Menu key for 2 seconds, the setting menu will pop-up. Select Copy File, it will copy all photo and music on the current card to the target card

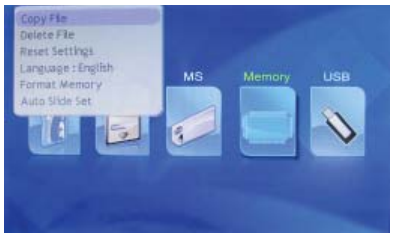

b) In File Operation Screen, press the Setup button on the remote control or hold the Menu key for 2 seconds, the setting menu will pop-up. Then select Copy File, it will delete the photo and music which you select to the target card.

Select file:

C. In File Operation Screen, press PLAY button/ Menu key once

D. In the setting menu, select Set Favorite

Navigating in the Digital Photo Frame

Format Memory

In Select Card Screen select Memory, then press the Setup button on the remote control or hold the Menu key for 2 seconds, the setting menu will pop-up. Then select Format Memory to format it.

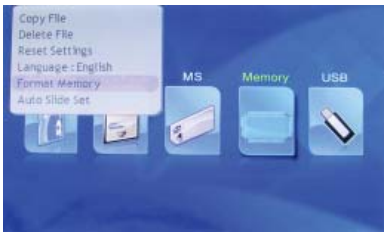

*NOTE: Features vary depending on model number. Your model may not have an internal memory.

Playing music with your pictures

NOTE: This digital frame will only play music files that are in MP3 format. Other music file types will not be recognized by the frame and you will not be able to play them.

A. First press “Music” key on the remote control to enter the music database. Use the arrow keys to select the desired music file.

B. Press “Slideshow” key. This will play the selected MP3 while playing the slideshow.

Changing the Picture Frame

Changing the Picture Frame

1. Locate the lock on the side of the back cover. Slide the lug forward in the direction as illustrated, to release the back cover from the frame.

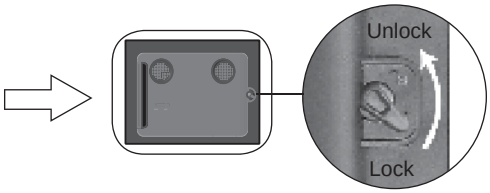

2. Lift the back cover and gently pull it from the two slots on the other side of the frame.

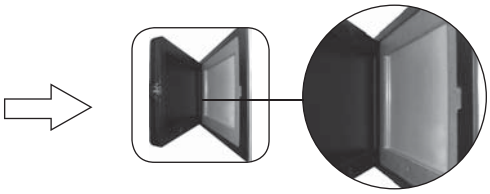

3. To reattach a new frame, simply hold the back cover at a slight angle, then insert the two wedges on the other side of the back cover into the matching slots of the frame. To lock the frame into place, slide the lug to the “LOCK” position.

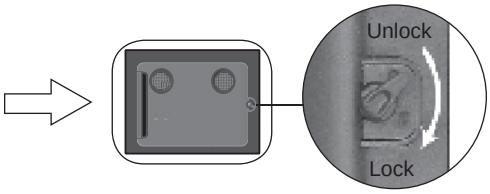

Recycling

Questions? Need some help?

Call our help line found on the insert with this icon:

Or visit www.polaroid.com.

RoHS

WEEE:
This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly. To find out how to properly dispose of this product, please go to **www.polaroid.com** and click on "**Company**" or call the customer service number for your country listed in the instruction manual.

"Polaroid" and "Polaroid and Pixel" are trademarks of Polaroid Corporation.

For service, support and warranty information, visit www.polaroid.com.